TEAC

SB303

Soundbar With Wireless Subwoofer

USER MANUAL

IMPORTANT !

WARRANTY INFORMATION INSIDE. PLEASE READ

Trademark of TEAC Corporation JAPAN

www.teac.com.au

TEAC WARRANTY PROCEDURE

v1.1: Mar 2014

Please read the owner's manual carefully and ensure that you have followed the correct installation and operating procedures.

1. Please read this warranty card.
2. Keep your purchase receipt to enable you to proceed quickly in the event of a Warranty Service.
3. If you require Warranty Service, please contact the TEAC Warranty Service Hotline at 1300 553 315 for assistance. Please ensure that you have the model number, serial number and purchase receipt ready when you call.

Please complete the section below and keep this information for your own records.

Name

Address

Postcode

ame/No. Serial No.

Name

Address

Postcode

Thank you for selecting a TEAC product.

If your TEAC product malfunctions, please call us directly for warranty support between Monday to Friday at 8.30AM – 6PM AEST at the

TEAC Warranty Service Hotline

1300 553 315

For other enquiries, please contact us at:

support@teac.com.au

www.teac.com.au

When calling to receive warranty service, please have:

1. **Your model and serial number**
2. **Proof of purchase**
3. **And your product in front of you**

NOTE:

- You are required to provide a copy of your proof of purchase in order to have your claim processed.
- You can check whether your product is entitled to a 3-year warranty on www.teac.com.au
- Please read the Terms and Conditions for details of your warranty entitlement.

TEAC TERMS AND CONDITIONS

v1.1: Mar 2014

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

1. TEAC warrants that this product is free from defects in material and workmanship under normal domestic use with reasonable care and skill. Maintenance and cleaning (i.e. laser head) is not covered by this warranty. The TEAC warranty only applies to 2014 TEAC products purchased NEW from a TEAC Authorised Retailer in Australia. This warranty only applies to the original purchaser and cannot be transferred.

2. The benefits to the consumer given by this Warranty are in addition to other rights and remedies of the consumer under a law in relation to goods or services to which the warranty relates, being the Australian Consumer Law.

3. Refund or replacement via your TEAC Authorised Retailer is available for a period of 14 days after purchase for goods that have been inspected and determined to have a major failure. Refund and exchange is not applicable for change of mind.

4. Subject to the terms herein, this warranty effectively covers TEAC product models released in 2014, excluding products purchased for commercial purposes, as specified in the Warranty Periods Table below from the date of purchase. TEAC models released before 2014 shall be covered under TEAC Warranty v1.5.2 (DEC 2011). Commercial use products are covered for 12 months only (Authorised Service Centre).

TEAC PRODUCT excluding commercial use products	SIZE (TV)	WARRANTY PERIOD from date of purchase	WARRANTY SERVICE TYPE
LED/LCD TV (Without built in Blu-ray / DVD player)	42" and above	0 to 12 months	In-home service*
		13 to 36 months	Authorised Service Centre Service
	32" to 40"	36 months	Authorised Service Centre Service
	Below 32"	12 months	Authorised Service Centre Service
LED/LCD TV (With built in Blu-ray / DVD player)	42" and above	12 months	In-home service*
	19" to 40"	12 months	Authorised Service Centre Service
All other TEAC products	N/A	12 months	Authorised Service Centre Service

Please refer to www.teac.com.au for verification of 2014 models.

5. In Home Service/Pick up* Service
This service will only be provided as part of this warranty if all the following conditions are met;
a) The product is indicated in the Warranty Period Table.
b) The product is within the warranty period.
c) The product is located within the normal service area of the local TEAC Authorised Service Centre.
If TEAC determines that the product is not repairable on site, TEAC can complete the repair by taking the product to a TEAC Authorised Service Centre.

Authorised Service Centre Service
The purchaser is required to send the product at their own expense to the nearest TEAC Authorised Service Centre for repair. In this event, proof of purchase is required to support a warranty claim. After the repair, the product will be available for collection by or return to the purchaser at a fee upon request. TEAC in-home service can be made available at a fee upon request.

6. A 12-month replacement warranty is applicable to all Accessories such as Remotes, Power Adapters and Cables.

7. TEAC will ensure to the best of its abilities that all required parts are made available for any required service/repair.

8. TEAC Australia Pty Ltd and its Authorised Service Centres will use their best endeavours to complete product repairs within a reasonable period based on available resources and workload during the time when service is requested and performed.

9. Refurbished parts may be used to repair the product. In the case of a replacement, the product may be replaced, with a refurbished unit of the same type or, if one is unavailable, a similar refurbished model with equal or better features and specifications.

10. Please be advised that if the product presented for repair is capable of retaining user-generated data, the data may be lost during servicing. Customers are strongly encouraged to back up all important information/data before sending the product in for service/repair.

11. Service will be provided only during normal business hours and under safety conditions and circumstances. TEAC and its authorised service agents can refuse any repair if safety, in relation to OH&S, becomes a concern to its staff or authorised service agents' personnel.

12. The warranty is void and warranty claims may be refused, subject to the Australian Consumer Law, if:
a) The product was not transported, installed, operated or maintained according to manufacturer instruction, or
b) The product was abused, damaged, tampered, altered or repaired by any unauthorised persons, or
c) Product failure is due to accidents during use, installation or transit, power surges, use of defective or incompatible external devices, exposure to abnormal conditions such as excessive temperatures or humidity, or entry of liquids, objects or creatures into the product, cockroach infestations, or
d) The customer is unable to provide proof of purchase of the product for verification, or
e) The serial number of the product is missing or has been tampered with.

13. Where any repairs or services required that are outside of the terms and conditions of this Warranty are requested by the customer, or where a fault is determined to be outside of the terms and conditions of the Warranty during an In-Home Service call, the customer shall be charged for the cost of the repair and/or the In-Home service call fee.

14. No one is authorised to assume any liability on behalf of TEAC or impose any obligation on it, in connection with the sale of any equipment other than as stated in this warranty and outlined above.

15. TEAC and/or its Authorised Service Centres reserve the right to inspect and verify whether the product is exhibiting a major failure as claimed by customers/retailers.

16. LCD dead pixel policy, please contact TEAC at support@teac.com.au for assistance.

Contents

Important Safety Instructions **4**
- Safety 4
- Warning 5

Identifying the Parts **6**
- Main Unit 6
- Wireless Subwoofer 7
- Remote Control 7

Preparations **7**
- Prepare the Remote Control 7

Connections **8**
- Use the OPTICAL Socket 8
- Use the AUX Socket 8
- Use the MP3 Link Socket 9
- Connect Power 9
- Pairing the Wireless Subwoofer with the Main Unit 10

Basic Operation **10**
- Standby/ON 10
- Select Modes 10
- Adjust the Volume 11
- Select a Preset Sound Effect 11

Aux/Mp3 Link/Optical Operation **11**

Play with Bluetooth Device **11**
- Pair Bluetooth-enabled Devices 11
- NFC (Near Field Communication) Operation 12
- Listen to Music from Bluetooth Device 12

Troubleshooting **13**

Specifications **13**

Standard Accessories **14**

Wall Mounting **14**

Important Safety Instructions

WARNING
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude as to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Safety

1 **Read these instructions** – All the safety and operating instructions should be read before this product is operated.

2 **Keep these instructions** – The safety and operating instructions should be retained for future reference.

3 **Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.

4 **Follow all instructions** – All operating and use instructions should be followed.

5 **Do not use this apparatus near water** – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool and the like.

6 Clean only with a dry cloth.

7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8 Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.

9 Do not override the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, ask an electrician to replace the obsolete outlet.

10 Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and at the point where they exit from the apparatus.

11 Only use attachments/accessories specified by the manufacturer.

12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13 Unplug the apparatus during lightning storms or when unused for long periods of time.

14 Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.

15 ⧈ This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

Caution:

- Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on apparatus.
- The mains plug/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.

Warning

- The battery (battery or batteries or battery pack) must not be exposed to excessive heat such as sunshine, fire or the like.
- Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc. Make sure there is at least 20 cm of space above and at least 5cm of space on each side of the unit.
- Do not place this unit close to strong magnetic fields.
- Do not place the unit on the amplifier or receiver.
- Do not place this unit close to damp areas as the moisture will affect the life of the laser head.
- Should any solid object or liquid fall into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry or slightly damp cloth.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank on the cord.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment.
- The marking label is pasted on the bottom of the equipment.

⚠ DO NOT INGEST BATTERY,CHEMICAL BURN HAZARD

The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause sever internal burns in just 2 hours and lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Identifying the Parts

Main Unit

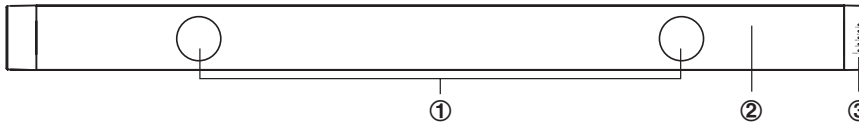

1 Speakers

2 Remote Control Sensor

3 LED Indicators

- **POWER:**
  In STANDBY mode: Light up red.
- **AUX/MP3 LINK**
  In AUX mode: Light turn on.
  In MP3 LINK mode: Light flash.
- **OPTICAL:**
  Sound output available: Light turn on.
  Sound output unavailable: Light flash.
- **BLUETOOTH:**
  Bluetooth playing mode: Light turn on.
  Bluetooth paring mode: Light flash.
- **MOVIE/MUSIC:**
  In MOVIE mode: Light turn on.
  In MUSIC mode: Light flash.
  In DEFAULT mode: Light turn off.

4 NFC (Near Field Communication) sensor.

5 MP3 LINK Socket
- Connect to an external audio device.

6 ⏻/SOURCE
- Press this button to turn ON or press and hold to Standby mode.
- Select the play function.

7 VOL+/VOL-
- Increase/decrease the volume level.

8 OPTICAL Socket
- Connect to an external audio device.

9 AUX (L/R) Socket
- Connect to an external audio device.

10 AC~ Power Cord

Front View

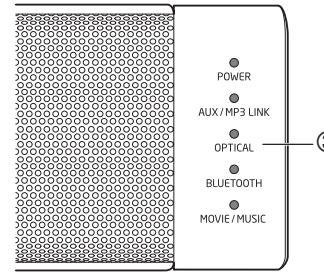

Side View

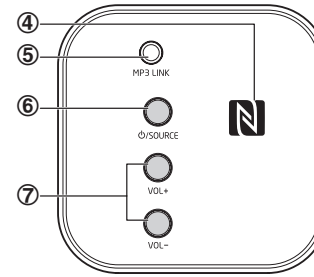

Rear View

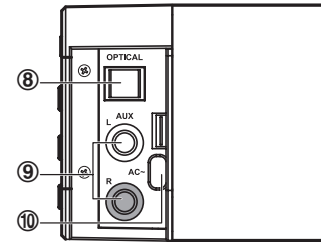

Wireless Subwoofer

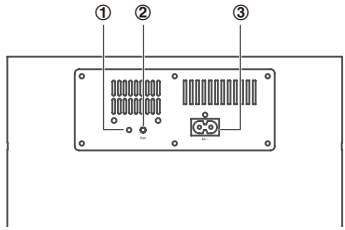

1 **PAIR** Indicator Light
- Pair indicator lights up when the pairing succeeds.

2 **PAIR** button
- Connect to the main unit.

3 **AC~** Socket
- Connect to power.

Remote Control

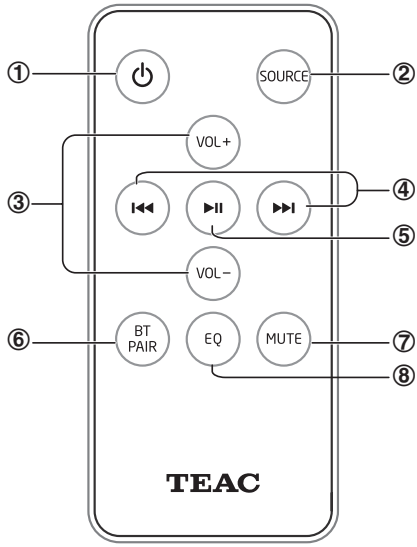

1 ⏻
- Switch the unit between ON and STANDBY mode.

2 SOURCE
- Switches the modes.

3 VOL+/VOL-
- Adjust the volume.

4 ⏮/⏭
- In Bluetooth mode, skip to previous/next audio file.

5 ⏯
- In Bluetooth mode, start or pause playback.

6 BT PAIR
- Activate the pairing function in BLUETOOTH mode and disconnect the existing paired Bluetooth device.

7 MUTE
- Mute or resume the sound.

8 EQ
- Select a preset sound effect.

Preparations

Prepare the Remote Control

The provided Remote Control allows the unit to be operated from a distance.
- Even if the Remote Control is operated within the effective range (6m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the Remote Control is operated near other products which generate infrared rays, or if other remote control devices using infra-red rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.

First-time use:

The unit has a pre-installed lithium CR2025 battery. Remove the protective tab to activate the remote control battery.



Replace the Remote Control Battery

1 Pull out the battery tray and remove the old battery.
2 Place a new CR2025 battery into the battery tray with correct polarity (+/-) as indicated.
3 Insert the battery tray back into the slot.

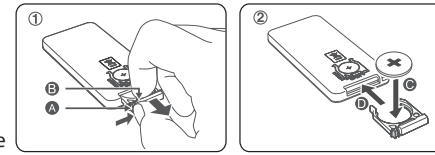

Precautions Concerning Batteries

- When the Remote Control is not to be used for a long time (more than a month), remove the battery from the Remote Control to prevent it from leaking.
- If the batteries leak, wipe away the leakage inside the battery compartment and replace the batteries with new ones.
- Do not use any batteries other than those specified.
- Do not heat or disassemble batteries.
  Never throw them in fire or water.
- Do not carry or store batteries with other metallic objects. Doing so could cause batteries to short circuit, leak or explode.
- Never recharge a battery unless it is confirmed to be a rechargeable type.

Connections

Use the OPTICAL Socket

- Remove the protective cap of the **OPTICAL** socket, then connect an OPTICAL cable (not included) to the TV's OPTICAL OUT socket and the **OPTICAL** socket on the unit.

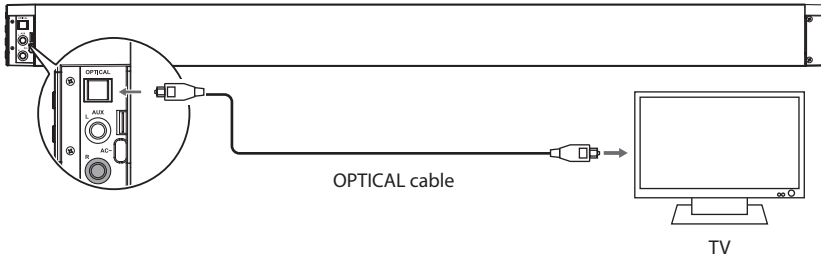

Tip: If there is no sound come out of the soundbar and the indicator light flash fast. Make sure the audio setting of your source player (e.g. DVD player, game player, TV) is setted to PCM with optical input.

Use the AUX Socket

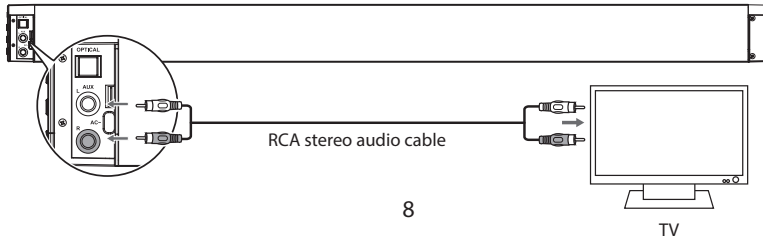

- Use a RCA stereo audio cable (included) to connect the TV's audio output sockets to the **AUX (R/L)** socket on the unit.

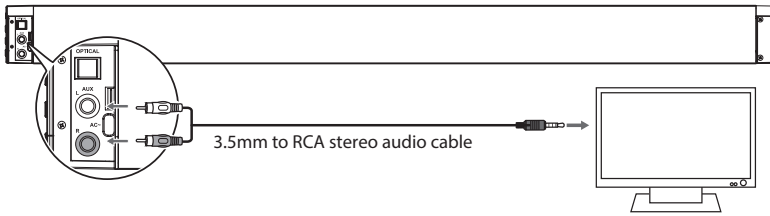

- Use a 3.5mm to RCA audio cable (included) to connect the TV's headphone socket to the **AUX (R/L)** socket on the unit.

Use the MP3 Link Socket

- Use a 3.5mm to 3.5mm audio cable (included) to connect the external audio device headphone socket to the **MP3 LINK** socket on the unit.

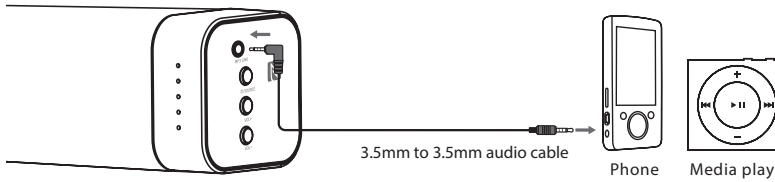

Connect Power

Risk of product damage!

- Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Before connecting the AC power cord, ensure you have completed all other connections.
- Connect the mains plug of the main unit to a mains socket.
- Connect the mains cable to the **AC~** Socket of the subwoofer and then into a mains socket.
- Ensure all connections are connected before connecting to the mains power socket.

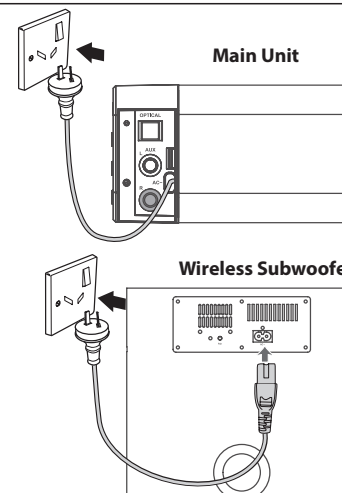

Pairing the Wireless Subwoofer with the Main Unit

Automatic pairing

The subwoofer and soundbar will automatically pair when both units are plugged into the mains sockets and turned on. No cable is needed for connecting the two units.

- When the subwoofer is pairing with the main unit, the Pair Indicator will flash.
- When the subwoofer is paired with the main unit, the Pair Indicator will light up.

NOTE:

- Do not press the **Pair** button on the rear of the subwoofer, except for manual pairing.
- If the automatic pairing fails, pair the subwoofer with the main unit manually.

Manual pairing

1. Ensure that all the cables are well connected and the main unit is in Standby mode.
2. Press and hold the **Pair** button on the rear of the subwoofer for a few seconds. The subwoofer will enter the pairing mode and the Pair Indicator will blink quickly.
3. Press the ⏻**/SOURCE** button on the main unit or the ⏻ button on the remote control to switch the main unit on.
4. After the wireless connection succeeded, the Pair Indicator will light up.
5. If the **Pair** indicator blinks, the wireless connection has failed. Unplug the cable of the subwoofer and then reconnect the main cable after 3 minutes. Repeat step 1 ~ 4.

NOTE:

- If the wireless connection fails again, check if there is conflict or strong interference (for example, interference from an electronic device) around your location. Remove these conflicts or strong interferences and repeat the above procedures.
- The subwoofer should be within 6m of the soundbar.
- If a TV or an external device is connected, the main unit and the subwoofer will switch on automatically when the TV or the external device is switched on.
- If the main unit is not connected with the subwoofer and it is in On mode, the POWER Indicator will flash. Follow step 1 ~ 4 above to pair the subwoofer to the main unit.

Basic Operation

Standby/ON

When you first connect the unit to the mains socket, the unit will be in STANDBY mode.

- Press ⏻ to switch the unit ON.
- Press ⏻ again to switch the unit back to STANDBY mode. The POWER indicator will light up red.
- Disconnect the mains plug from the mains socket if you want to switch the unit OFF completely.

Select Modes

Press the **SOURCE** button repeatedly on the unit or on the remote control to switch between **AUX, MP3 LINK, OPTICAL and BLUETOOTH** modes.

Adjust the Volume

- Press the **VOL +/–** button on the unit or on the remote control to adjust the volume.
- If you wish to turn the sound off, press the **MUTE** button on the remote control. Press the **MUTE** again or press the **VOL+/-** button to resume normal listening.

Select a Preset Sound Effect

While playing, press the **EQ** button on the remote control to select between preset equalisers: **Movie** (recommended for viewing movies), **Music** (recommended for listening to music) and default setting (EQ mode off).

Aux/Mp3 Link/Optical Operation

1 Ensure that the unit is connected to the TV or audio device.

2 While in ON mode, press the **SOURCE** button repeatedly on the unit or on the remote control to select **AUX** or **MP3 LINK** or **OPTICAL** Mode.

3 Operate your audio device directly for playback features.

4 Press the **VOL +/–** button to adjust the volume to your desired level.

Play with Bluetooth Device

You can listen to tracks from a media device if connected to the unit via Bluetooth.

Pair Bluetooth-enabled Devices

The first time you connect your bluetooth device to this player, you need to pair your device to this player.

Note:

- The operational range between this player and a Bluetooth device is approximately 8 meters (without any object between the Bluetooth device and the unit).
- Before you connect a Bluetooth device to this unit, ensure you know the device's capabilities.
- Compatibility with all Bluetooth devices is not guaranteed.
- Any obstacle between this unit and a Bluetooth device can reduce the operational range.
- If the signal strength is weak, your Bluetooth receiver may disconnect, but it will re-enter pairing mode automatically.

1 During ON mode, press the ⏻**/SOURCE** button on the unit or **SOURCE** button on the remote control repeatedly to select Bluetooth mode. The Bluetooth indicator will flash slowly.

2 The system has entered pairing mode.

- OR press the "**BT PAIR"** button on the remote control to be searchable. The Bluetooth indicator will flash rapidly.

3 Activate your Bluetooth device and select the search mode. **"SB303**" will appear on your Bluetooth device list.

4 Select **"SB303**" in the pairing list. The Bluetooth indicator will light up solidly while the pairing succeeds.

5 To disconnect the Bluetooth function, switch to another function on the unit or disable the function from your Bluetooth device.

Tips:

- Enter "0000" for the password if necessary.
- If there is an existing connection, press the "**BT PAIR"** button on the remote control to re-activate the pairing mode, the connection will be interrupted.
- If no other Bluetooth device pairs with this player within two minutes, the player will recover its previous connection.
- The player will also be disconnected when your device is moved beyond the operational range.
- If you want to reconnect your device to this player, place it within the operational range.
- If the device is moved beyond the operational range, when it is brought back, please check if the device is still connected to the player.
- If the connection is lost, follow the instructions above to pair your device to the player again.

NFC (Near Field Communication) Operation

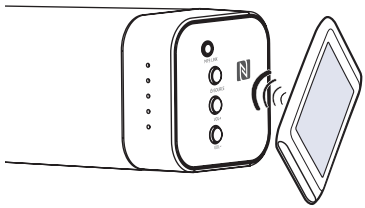

Pair your NFC-enabled mobile device directly with this unit by just a single tap.

1. Activate NFC on your mobile device.
2. Tap the mobile device on the " N " icon of the unit.
3. Operate your mobile device directly for playback features.
4. To disconnect, tap the mobile device on the " N " icon of the unit to disconnect or disable NFC from your mobile device.

Note: This NFC function only works with mobile devices that support NFC technology.

Tips:

Some NFC-enabled mobile devices cannot pair directly with the unit via NFC, please try either one of the solutions below:

- Please download the App "Tap-and- Pair" from Google Play Store (https://play. Google. com) and install.
- Pair with the unit manually first, then touch again on the NFC sensing area.

Listen to Music from Bluetooth Device

- If the connected Bluetooth device supports Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device through the player.
- If the device also supports Audio Video Remote Control Profile (AVRCP), you can use the player's remote control to play music stored on the device.
  1. Pair your device with the player.
  2. Play music via your device (if it supports A2DP).
  3. Use supplied remote control to control play (if it supports AVRCP).
     - To pause/resume play, press the ►II button.
     - To skip to a track, press the I◄◄,►►I buttons.

Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this unit, check the following points before requesting service.

No power

- Ensure that the AC cord of the apparatus is properly connected .
- Ensure that there is power at the AC outlet.
- Press standby button to turn the unit on.

Remote control does not work

- Before you press any SOURCE button, first select the correct source.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/-) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

No response from the unit

- Disconnect and reconnect the AC power plug, then turn the unit on again.

I can't find the Bluetooth name of this unit on my Bluetooth device for Bluetooth pairing

- Ensure the Bluetooth function is activated on your Bluetooth device.
- Ensure you have paired the unit with your Bluetooth device.

Specifications

General

Power requirements	AC220-240V~ 50/60Hz
Main unit power consumption	30 W
Subwoofer power consumption	30 W
Output power RMS	30 W x 2 + 60 W
Total harmonic distortion	1%(1kHz, 1W)
Audio input sensitivity	700mV
Frequency response	40Hz - 20KHz
Main unit(W x H x D)	806 x 62 x 60 mm
Subwoofer (W x H x D)	240 x 315 x 240 mm

Speakers

Total impedance	8 Ω X 2 + 4 Ω

Remote Control

Distance	6m
Angle	30^{O}

Standard Accessories

Remote Control ..... x 1
Instruction Manual ..... x 1
RCA audio cable ..... x 1
3.5mm - RCA audio cable ..... x 1
3.5mm - 3.5mm audio cable ..... x 1
Subwoofer AC power cord ..... x 1
Wall bracket ..... x 2

- Design and specifications are subject to change without notice.

Wall Mounting

1 Remove the screws from the main unit.

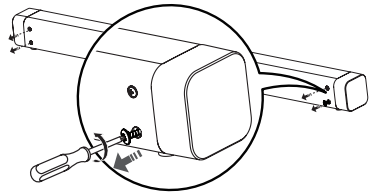

2 Attach the wall brackets to the main unit with the screws removed from the main unit

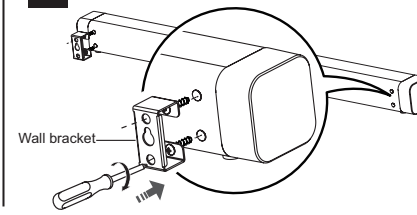

3 Drill 2 parallel holes (Ø 3-8 mm each according to wall type) in the wall. The distance between the holes should be 720 mm.

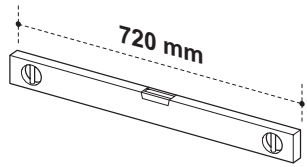

4 Firmly fix 1 dowel into each hole in the wall if necessary.

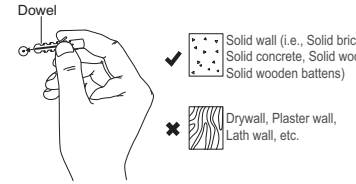

5 Leave a 5 mm gap between the wall and the screw's head. Lift the unit with the attached wall brackets over the heads of the screws and slot into place.

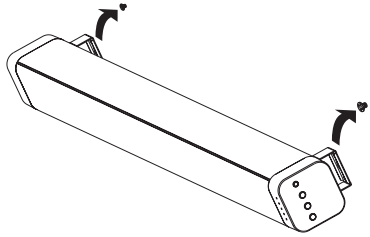

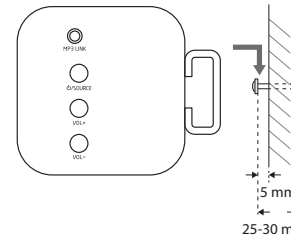

TEAC

In the event of a product failure within the warranty period, please call the

TEAC Warranty Service Hotline

1300 553 315

Between Monday to Friday - 8.30AM to 5PM AEST

*Please have your purchase receipt and the product's serial number ready

For other enquiries and support please email

support@teac.com.au